

<b>WinFrog Device Group:</b>	<b>OUTPUT</b>
<b>Device Name/Model:</b>	<b>GNS1 Annotation</b>
<b>Device Manufacturer:</b>	
<b>Device Data String(s) Output to WinFrog:</b>	
<b>WinFrog Data String(s) Output to Device:</b>	
<b>WinFrog Data Item(s) and their RAW record:</b>	OUTPUT                  NONE

**DEVICE DESCRIPTION:**

Due to the age of this device no description is available.

***DEVICE CONFIGURATION INSTRUCTIONS***


---

**WINFROG I/O DEVICES > EDIT I/O:**

Serial  
Configurable Parameters

**WINFROG I/O DEVICES > CONFIGURE DEVICE:**

This device must be configured at the I/O Device window level. In the I/O Devices window, click the device name to select it, then right-click and select Configure Device. The GNS1 Annotation Setup dialog box appears, as seen below.

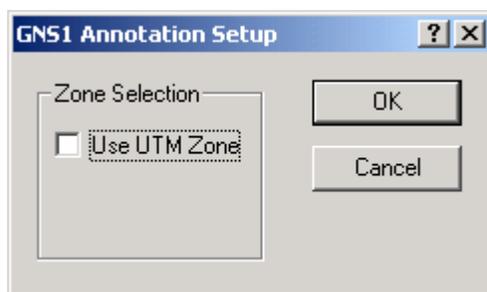

Select the Use UTM Zone option to include the current UTM zone number in the output data string.

**WINFROG VEHICLE > CONFIGURE VEHICLE DEVICES > DEVICE DATA ITEM > EDIT:**

Adding the GNS1 Annotation device creates the OUTPUT data item.

**Data item: OUTPUT, GNS1Annotate, OUTPUT**

There are no edit options available for this data item.