

WinFrog Device Group:	INS
Device Name/Model:	SimAttitude
Device Manufacturer:	
Device Data String(s) Output to WinFrog:	NONE
WinFrog Data String(s) Output to Device:	NONE
WinFrog Data Item(s) and their RAW record:	ATTITUDE 413

DEVICE DESCRIPTION:

This is a simulated device designed to provide data similar to real time attitude devices. This device is typically used for simulation and training purposes.

To add this device, locate the SIMULATED device in the INS group in the Add Device dialog.


DEVICE CONFIGURATION INSTRUCTIONS

WINFROG I/O DEVICES > EDIT I/O:

No I/O parameters - Simulated Device

WINFROG I/O DEVICES > CONFIGURE DEVICE:

This device must be configured at the I/O Device window level. In the I/O Devices window, click the device name to select it, then right-click and select Configure Device. The Configure Simulated Attitude Sensor dialog box appears, as seen below.

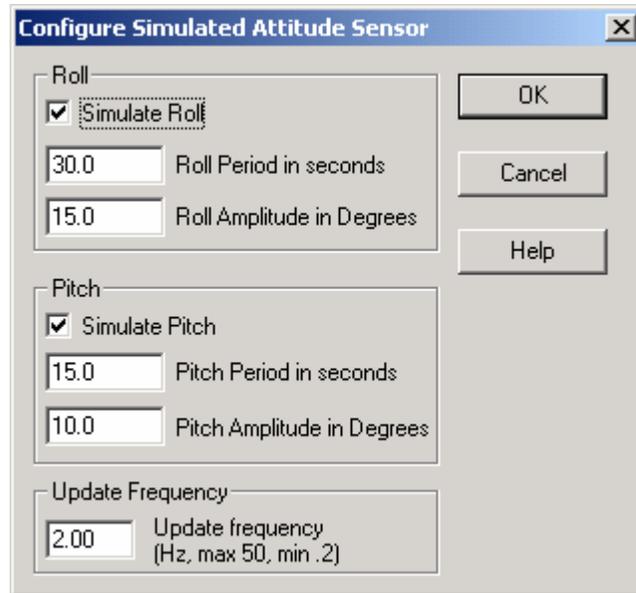


Select (check) the Simulate Roll and/or the Simulate Pitch options to enable the simulated attitude data. The Pitch and Roll Period entries define how long, in seconds, the device simulates a positive Pitch/Roll before simulating a negative Pitch/Roll. The simulated negative values are generated for the same interval and then return to positive. The Amplitude values entered define the maximum values, in degrees, for the simulated Pitch and Roll data. Enter the update frequency in Hertz (1 Hertz equals 1 cycle per second).

WINFROG VEHICLE > CONFIGURE VEHICLE DEVICES > DEVICE DATA ITEM > EDIT:

Adding the SimAttitude device creates the ATTITUDE data item. Once the data item has been added to the vehicle, it must be edited to suit the application.

Data item: INS, SimAttitude, ATTITUDE

Highlight the ATTITUDE data item in the vehicle's device list and click the Edit button to open the Attitude dialog as seen below.

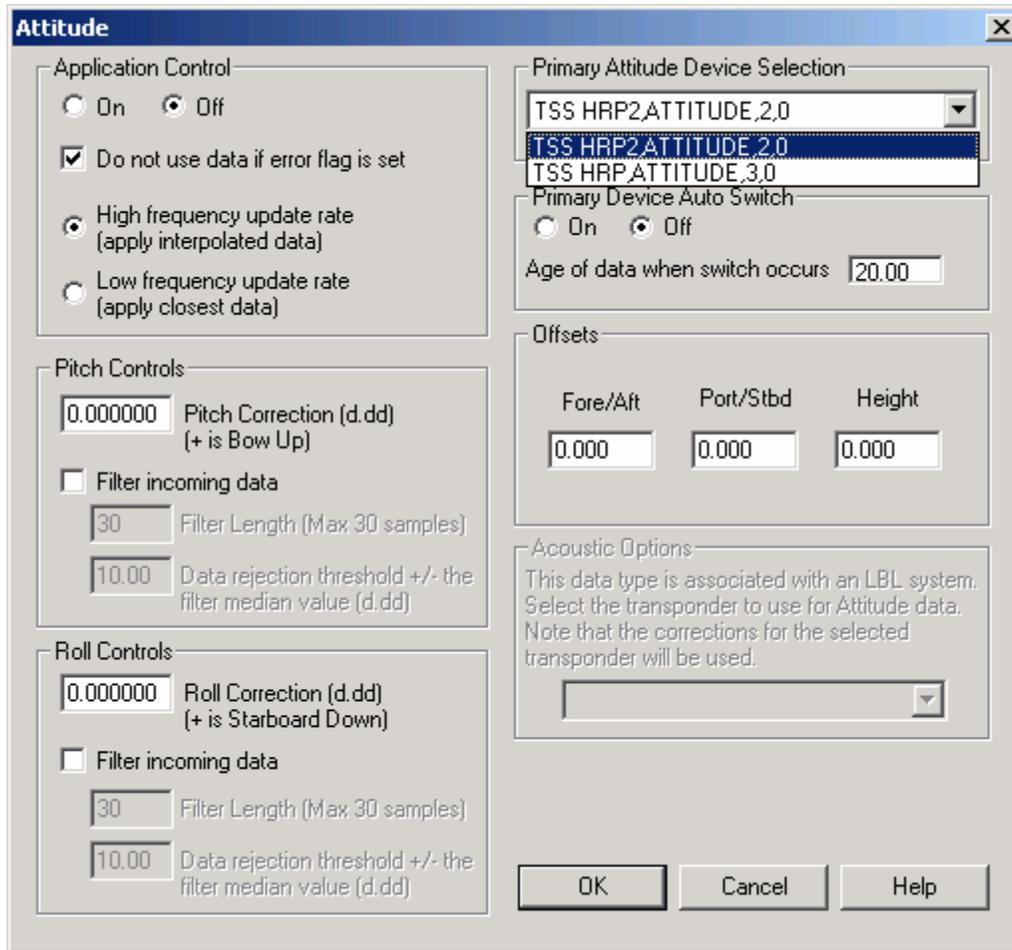

Attitude

By default, the sensor mode is off, meaning that data from the attitude device will not be used in the vehicle's calculations. To turn the sensor on, and begin using the inclination corrections in the position output, click the 'On' radio button.

Error flag testing

The error flag check box is applicable to those devices that output a code indicating the data is either good or bad. If checked and the device supports such a code in its telegram, WinFrog will look at the code and if the data is indicated as bad, WinFrog will not use the data.

Sensor Update Frequency Rate

If the associated attitude sensor has a high frequency update rate (e.g. 10Hz and higher) it is appropriate to extract attitude data for application by either interpolating or extrapolating for a given epoch. In this case, the *High frequency update* option should be selected. Some attitude sensors have slow update rates, in particular those installed in acoustic transponders that require interrogation. For these sensors interpolation/extrapolation can produce a bad value as there is insufficient information to determine the correct shape of the curve (aliasing). Thus the most

current attitude needs to be used. In this case, select the *Low Frequency update* option. This option applies to the use of the attitude data by the following data items:

- POSITION
- ELEVATION
- ALTITUDE
- XPONDER
- LBL TRANSCEIVER
- PROFILE

Pitch and Roll

There are two control groups, one for each of pitch and roll. Correction values can be added in this section of the window. The correction values (entered in units of degrees-decimal degrees) are added to the raw pitch and roll values received from the device before the data is applied to the vehicle's calculations. Ensure that entered values adhere to the sign convention used by WinFrog. You can verify that the corrections are entered properly by viewing the pitch and roll values in the I/O Device window and the Vehicle Text window.

Filtering

Additionally you may filter the incoming values to remove extraneous noise or spikes – check boxes are provided to switch this feature on or off. A filter length (up to 30 samples) and a threshold value (applied to the median of the samples in the filter to obtain lower and upper bounds) can be entered. Any pitch or roll values outside of the bounds are rejected and not used in the vehicle calculations, but will be recorded in the RAW files. If either one of pitch or roll is rejected, both values are ignored, although you may set up the filtering parameters for them separately. The status of the filters, including the current valid range for each of pitch and roll, and the percentage of values rejected, can be viewed in the calculations window, selecting the appropriate ATTITUDE data item.

Important:

Do not enable filtering unless there is a high enough data rate (say 10hz) to correctly determine the shape of the curve. Essentially, if the low frequency update rate is selected above, do not enable filtering.

Primary Attitude Device Selection

If more than one attitude device is present, you may select one of them to be primary and the others to be secondary and allow WinFrog to automatically switch between them should the primary system stop sending data or has bad data. There must be at least two attitude data items added to the vehicle to use this feature. (Note: The attitude and offset data displayed in this dialog is for the attitude device corresponding to the data item that is being edited. Selecting a Primary Attitude Device from the drop down list does not affect these values for any attitude device in the list. Every attitude device needs to be set up for its own corrections and offsets.)

Primary Device Auto Switch

Select the On radio button to turn on this feature. Then enter the time out time in the edit box. If WinFrog does not receive data from the primary attitude device, or if it receives bad data for this length of time, it will switch to the next secondary that is enabled and has good data.

Auto Switch Feature Usage

To use this feature first turn the sensor on as described in the Attitude section above. Next, select the attitude device that you wish to be primary from the drop down list box. Then turn the primary device auto switch on and enter the time out time. Then edit all the other attitude data items and enable them in the Attitude group box. Note that the same selected primary will be displayed for all attitude data items; similarly, the automatic feature will be turned on and the time out time will be the same. However, you must individually enable each attitude device in the Attitude group box.

Offsets

These offsets are used to calculate remote heave (lever arm). It is expected that these values are the offset from the center of gravity of the sensor. Then using the observed pitch, roll, and heave, the heave at the center of gravity will be calculated and assigned to the vehicle, which may then be output using the INSIX output device. However, it is recommended that the sensor be placed at the center of gravity. If this is not possible, it is better to enter the lever arm offsets into the sensor and have the sensor make the correction, then have the sensor output the corrected values with respect to the center of gravity. The INSIX output device expects that the heave assigned to the vehicle is with respect to the center of gravity.

WinFrog records the attitude data to a type 413 raw data record. This record contains observed Heave, Pitch, Roll, status, accuracy, and a time stamp to indicate precisely when the data was observed. See Appendix B: WinFrog File Formats in the WinFrog User's Guide for details on the Type 413 raw data record.

Acoustic Options

This applies to long base line acoustic transponders that have inclinometers. See chapter 17 for more information.